



Made in America Since 1968

# MAINTENANCE CHECKLIST

## 550

550, 550-HER, 550-SUN



Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

*\*Refer to [Service Manual](#) for precise schedule*

### WEEKLY RECOMMENDED MAINTENANCE

- Inspect the wheels and blade holder for damage
- Check that all screws are tight and secure
- Remove any glue, mastic, and debris from wheels, blade holder, and machine.
- Manually turn the angle adjustment wheel clockwise and counterclockwise to assure the machine raises and lowers the rear wheels
- Check for misaligned, binding of moving parts, broken parts and any other conditions that may affect operation.
- Make sure the T-Handle wrench that came with the machine is in the holder located on the left side of the machine near the adjustment knob.

### QUARTERLY RECOMMENDED MAINTENANCE\*

- Inspect handle grips for wear and replace if necessary.
- Check two Allen bolts that secure blade holder cover for wear and replace periodically.
- Inspect rear kick plate and remove any debris build-up.
- Check the blade holder for signs of wear, cracks, or other damage. Replace if necessary.
- Check rear wheels for damage and excessive wear.
- Check and grease angle adjustment wheel and threads to ensure they turn freely and the machine raises and lowers.
- Make sure the power switch is in the off position before plugging in the 550.
- Turn the machine on and off to verify that the on/off switch is working properly.

### BI-ANNUALLY RECOMMENDED MAINTENANCE\*

- Inspect/replace cutter head bearing. \*\*
- Inspect/replace the four isolators. \*\*

*\* More frequently if rented out often*

*\*\* See manual for details*



**SCAN TO  
ACCESS  
YOUR  
MANUAL**