



# RENTAL IN/OUT CHECKLIST

Made in America Since 1968

## 6280HD GLADIATOR

6280HD-HER, 6280HD-SUN

Each time the 6280HD Gladiator is rented out and returned, follow these steps to ensure it is in proper working condition.

Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

*\*Refer to [Service Manual](#) for precise schedule*



- Make sure the power cord coming from the machine (operator's handle) is in good working condition
- Make sure power switch is in the off position before plugging in the machine
- Plug the machine in and test the on/off switch to make sure it is functioning properly
- When the unit is powered on, push the two control levers forward and the 6280HD will move forward. Pull the two control levers backwards to move the unit in reverse.
- Make sure the T-Handle wrench that came with the machine is in the holder located directly below the left-hand grip towards the middle of the handle
- Remove any glue, mastic, and debris from the wheels and blade holder.
- Look for damage to the blade holder
- Make certain the front weight is present and bolts are tight
- All maintenance, nameplates, and safety stickers must be in place and legible
- Check that all electrical cords are free of damage
- For rental transport mode, affix transport wheels to the top of the blade cover
- Make sure the two axle pins are with the machine



**SCAN TO  
ACCESS  
YOUR  
MANUAL**