



MAINTENANCE CHECKLIST

Made in America Since 1968

6280 COMMANDER

6280-HER, 6280-SUN



Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

**Refer to [Service Manual](#) for precise schedule*

WEEKLY RECOMMENDED MAINTENANCE

- Inspect the wheels and blade holder for damage
- Make sure the power cord on the operator's handle is in good working condition and free of damage
- Plug the unit in and ensure the on/off switch is functioning properly.
- When the unit is powered on, push the two control levers forward and the 6280 will move in a forward direction. Pull the two control levers backwards to reverse the unit.
- Ensure the axle pins are secured in the wheel hub hole. (Remove the axle pins for easier maneuverability when not powered)
- Make sure the T-Handle wrench that came with the machine is in the holder located directly below the left-hand grip towards the middle of the handle.
- Remove any glue, mastic, and debris from the wheels, debris deflector, front weight, and blade holder plate.
- Check the quick adjustment multi-position handle to assure it moves freely and locks into place.
- Make sure the wheel cleaner touches, but does not dig into, the wheel.
- Check for misaligned, binding of moving parts, broken parts and any other conditions that may affect operation.
- All maintenance, nameplates and safety stickers must be in place and legible.
- Check that the power cord is free of damage.
- Check that all screws are tight and secure.

BI-ANNUALLY RECOMMENDED MAINTENANCE*

- Inspect handle grips for wear and replace if necessary.
- Check five allen bolts that secure blade holder cover for wear and replace periodically.
- Check the blade holder for signs of wear, cracks, or other damage. Replace if necessary.
- Check rear wheels for damage and excessive wear.
- Inspect/replace cutting head bearing.**
- Inspect/replace the isolators.**
- Remove and replace 1.5 gallons of Texaco Rando 46 Hydraulic Oil.

** More frequently if rented regularly*

*** See manual for complete detailed instructions*



**SCAN TO
ACCESS
YOUR
MANUAL**