



Made in America Since 1968

MAINTENANCE CHECKLIST

GP700

Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

**Refer to [Service Manual](#) for precise schedule*



- Ensure 7-gallon water tank is empty and clean
- Check that the forward/rear locking pitch adjustment is operational
- Check that the safety emergency stop key and lanyard are present and functioning
- Check single transport caster for damage
- All four removable weights on grinder base are present
- Check control box: soft start, forward/reverse, and variable speed functionality
- Check floating shroud and base seal brushes
- Ensure Morflex couplers are free of damage
- Using white lithium grease, grease the handle Zerk fittings if required.
- Ensure the dust collector hoses from grinder base to dust collector port are hooked up and free of damage
- Check frame and base for cracks or visible damage
- With water in the tank, pull the water trickle handle to make sure water is being released onto the diamond tooling



**SCAN TO
ACCESS
YOUR
MANUAL**