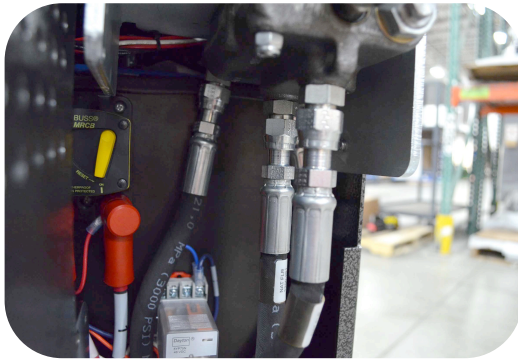
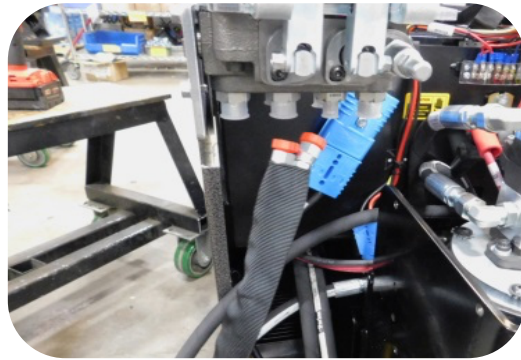
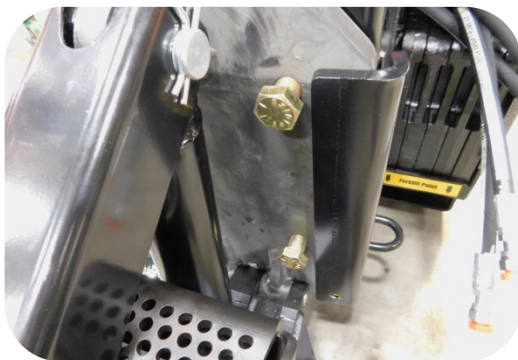
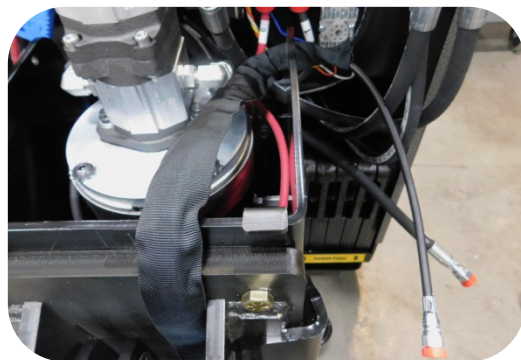


# 5700 MANUAL TO DUAL LIFT CONVERSION

1. Remove single valve hoses, noting the position. Mark/tag hose locations (very important to install in the same orientation. Failure to uninstall in proper orientation will result in catastrophic failure (Figure 1).
2. Remove cylinder hoses, noting position of each (Figure 2).
3. Remove (4) 1 1/8" holding bolts and lift out manual slide plate (Figure 3).
4. Install dual lift slide plate and stop bracket, tighten down top 2 nuts and bolts and bottom right pinch bolt (Figure 4: Note hose routing).

**Fig. 1****Fig. 2****Fig. 3****Fig. 4**

5. Unplug backup beeper wires (blue connectors) (Figure 5).
6. Remove mounting bolts and single valve bracket assembly (Figure 6).
7. Attach new dual valve bracket assembly (Figure 7).
8. Re-connect hoses and beeper wires. Shorter (bottom) hose of cylinder connects to back fitting on the valve, longer (top) hose of cylinder connects to front fitting on valve (Figure 8).

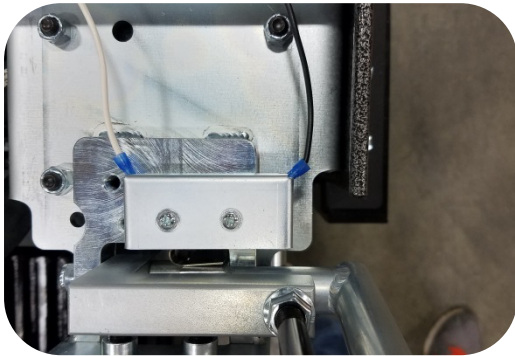


Fig. 5

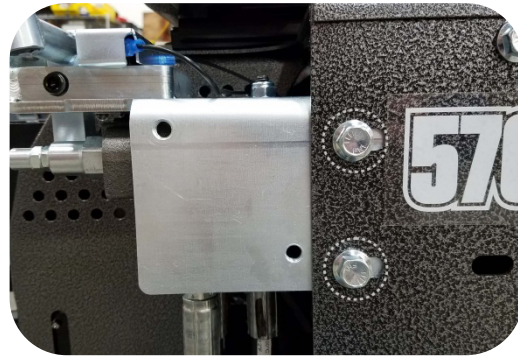


Fig. 6

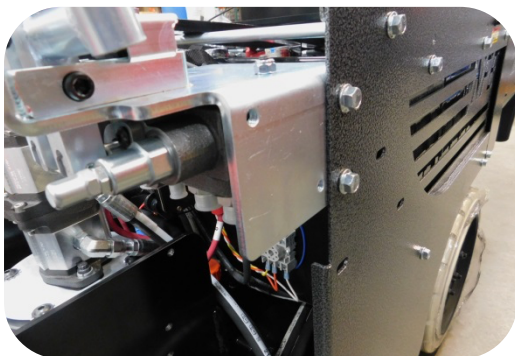


Fig. 7



Fig. 8