



Made in America Since 1968

RENTAL IN/OUT CHECKLIST

5280

Each time the 5280 is rented out and returned, follow these steps to ensure it is in proper working condition.

Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

**Refer to [Service Manual](#) for precise schedule*



- Make sure the power cord coming from the machine (operator's handle) is in good working condition.
- Make sure the power switch is in the off position before plugging in the machine
- Plug the machine in and test the on/off switch to make sure it is functioning properly.
- When the unit is powered on, squeeze the control lever forward and the 5280 will move in a forward direction. Adjust the speed using the dial on the front of the handle to ensure it's functioning properly.
- Make sure the T-Handle wrench that came with the machine is in the holder located directly below the right-hand grip towards the middle of the handle.
- Remove any glue, mastic, and debris from the wheels and blade holder.
- Look for damage to the blade holder.
- Make certain the front weight is present and bolts are tight.
- All maintenance, nameplates, and safety stickers must be in place and legible
- Check that all electrical cords are free of damage
- For rental transport mode, affix transport wheels to the top of the blade cover.



**SCAN TO
ACCESS
YOUR
MANUAL**