



Made in America Since 1968

RENTAL IN/OUT CHECKLIST

ROGUE

Each time Rogue is rented out and returned, follow these steps to ensure it is in proper working condition.

Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

**Refer to [Service Manual](#) for precise schedule*



- Make sure the power cord coming from the machine (operator's handle) is in good working condition
- Make sure power switch is in the off position before plugging in the machine
- Plug the machine in and test the on/off switch to make sure it is functioning properly
- When the unit is powered on, use the control levers to move the machine forward, backward, left and right to ensure full functionality.
- Make sure the T-Handle wrench that came with the machine is in the holder located directly below the left-hand grip towards the middle of the handle
- Remove any glue, mastic, and debris from the wheels, wheel scrapers, and blade holder.
- Look for damage to the blade holder
- Make certain the front weight, center weights, and slide weights are present and bolts are tight
- All maintenance, nameplates, and safety stickers must be in place and legible
- Check that all electrical cords are free of damage
- For rental transport mode, affix transport wheels to the rear of operator's handle



**SCAN TO
ACCESS
YOUR
MANUAL**